



Manufactured for:

Gymstick International Oy
Ratavartijankatu 11, 15170 Lahti, Finland



Model No. : TM-WPAD

GYMSTICK™

WalkingPad

User Manual



To reduce the risk of personal injury, read and understand all the instructions before using this product.

Electric shock hazard, where the appliance is used without the earth connection.

Never leave the treadmill unattended. Unplug the unit from the power outlet when it is not in use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This equipment is for household and office use only. Do not use the equipment outdoors.


If you feel any chest pains, nausea, dizziness, or short of breath, you should stop exercising immediately and consult your physician before continuing.

Content

1. Product and Accessories	02
2. Function schematic diagram	03
3. Guide for initial operation	07
4. Learn to use WalkingPad	09
5. Safety Notice	13
6. Maintenance and Service	16
7. Implied Warranty	17
8. Replacement and Disposal	18

Welcome to use


Thank you for choosing the WalkingPad Walking device, hereinafter referred to as a WalkingPad, which possess various advantages including exquisite, foldable, innovative integral design. From now on, enjoy the quality life of walking at home.

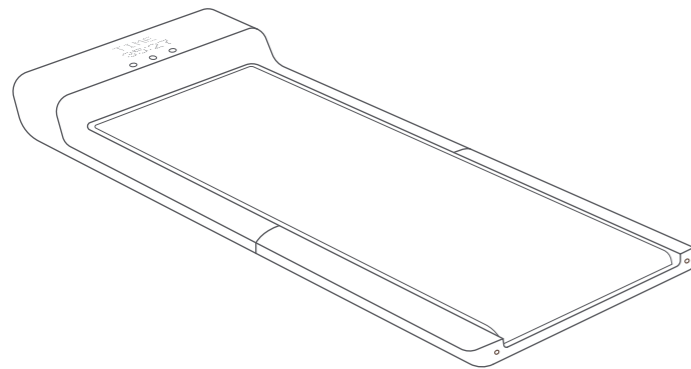

Performance & indicators	Detailed parameters
Expansion dimensions	1432 x 547 x 129 mm 56.5" x 21.5" x 5"
Folding dimensions	822 x 547 x 129 mm 32.5" x 21.5" x 5"
Walking Area	1200 x 415 mm 47" x 16.5"
Gross weight	31 kg / 68 lbs
Net weight	28 kg / 62 lbs
Maximum load	100 kg / 220 lbs
Applicable age	14 ~ 60 years old
Applicable height	Unlimited
Minimum speed	0.5 km/hr 0.5 mi/hr
Maximum speed	6 km/hr 3.75 mi/hr
Power Input	746 W
Frequency	50 / 60 Hz
Rated voltage	220 - 240 V ~
Sport mode	Standby mode/ Manual mode/ Automatic mode


01 Product and Accessories

Please carefully check whether the contents of the package are complete and intact. If there is any missing or damaged, please contact the seller.

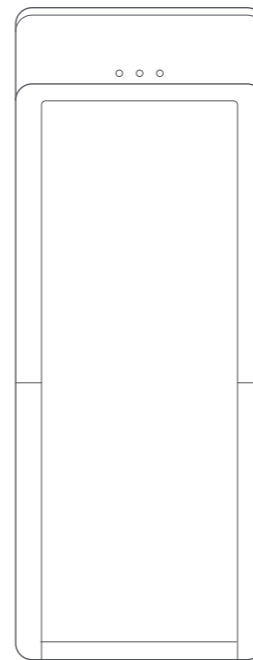

Main Product

 Parts



Power Cable



Remote Controller



Lanyard



Wrench



Silicone Oil

Other accessories



User Manual


02 Function schematic diagram

1. Product main body




02 Function schematic diagram


2. Introduction of the function of the indicator panel

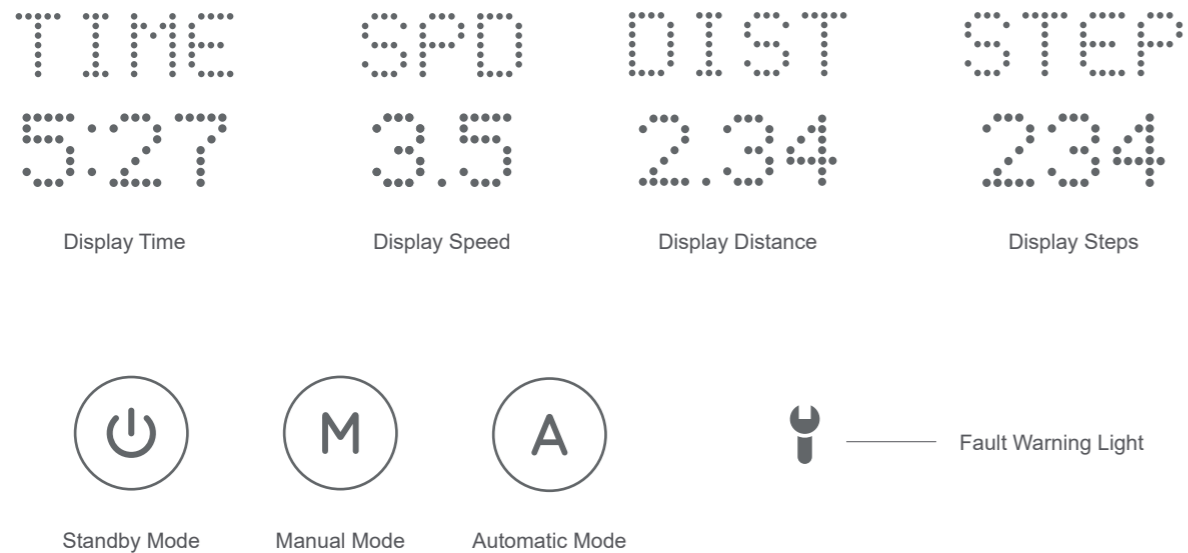


3. Walkingpad remote control

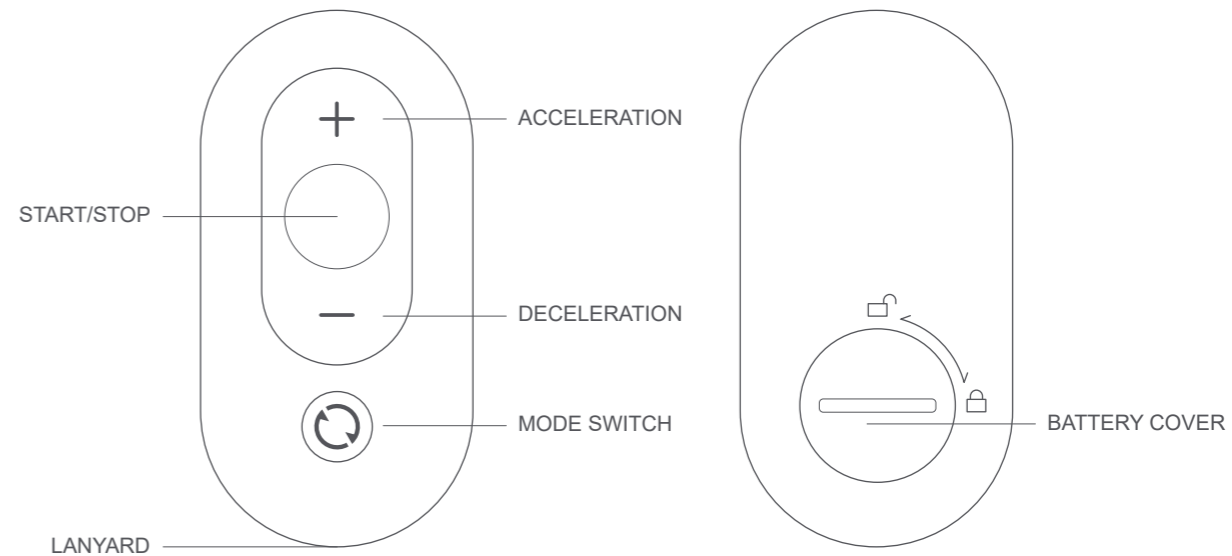


03 Guide for initial operation

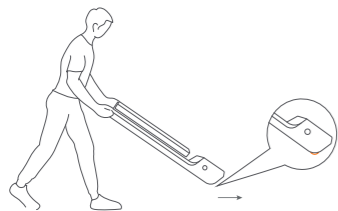

 
1. Choose flat ground to place the WalkingPad. It is forbidden to place it on thick and soft cushion. Please note: Don't connect the power before the WalkingPad is fully unfolded.



2. Unfold the walkingpad slowly and press it down to completely flat.

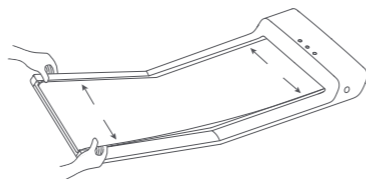


3. Check and adjust the walking belt to make sure it's centered.

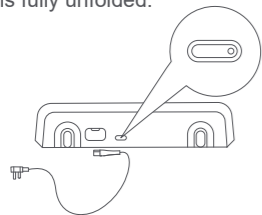

4. Connect the power cord and press the button to switch on.




5. Search "Walkingpad" App from Apple Store or Google Play and complete installation.

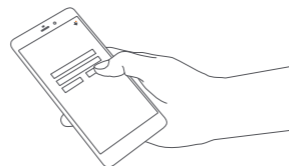


6. Open the App, follow the prompts to set up the device.




7. Enter novice guide.

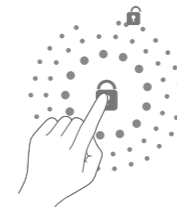


8. Complete Novice Guide to unlock all Functions (maximum speed 6 km/hr). Otherwise the speed limit remains at 3 km/hr.

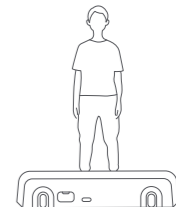

9. Start to use the WalkingPad.

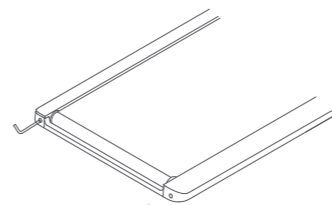


10. If the belt deviates from the orbit in use, please adjust properly. SEE: 06 Maintenance and service.

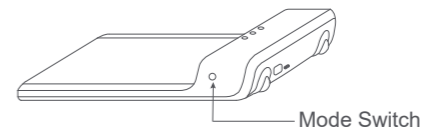



11. Short press: return to the previous mode. Long press: switch to Standby mode.

04 Learn to use WalkingPad

1. Mode instruction

 **Standby Mode**
Light of the Standby mode is on;
Motor and sensor stop responding.

 **Manual Mode**
Light of the manual mode is on;
Control the speed through the remote control or APP.

 **Automatic Mode**
Light of the automatic mode is on;
Speed is automatically controlled by intelligent algorithm.
It follows the speed of walking.

2. Instructions of the standby mode control



Standby Mode

The motor and sensor stop responding in this mode to prevent nonusers from accidentally triggering the WalkingPad.




Mode Switch
Short press: return to the previous mode.

3. Instructions of manual mode control (primary mode)




Manual Mode

In this mode, the speed of the WalkingPad can be controlled by the remote control. It is recommended that beginners use the manual mode first and then use the automatic mode after being skilled in using the WalkingPad. The manual mode is controlled by remote control by default, that is, the START/STOP button of the remote control is used to start or stop the WalkingPad, which can be modified in the client "Personalized".

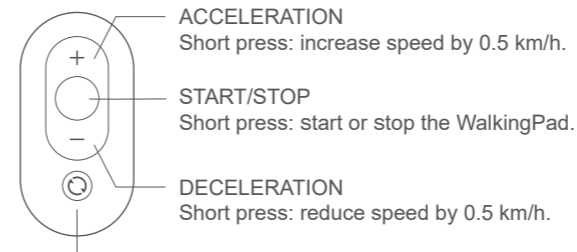

MODE SWITCH
Short press: switch to automatic mode.
Long press: switch to standby mode.

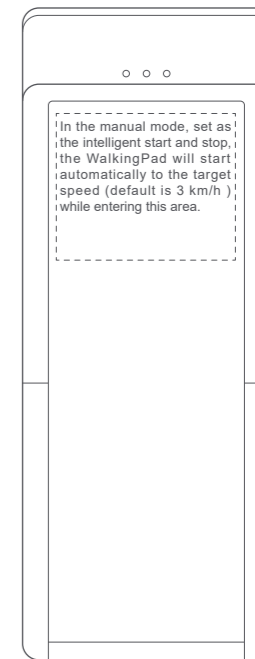


04 Learn to use WalkingPad

4. Description of automatic mode control (advance mode)




Automatic mode

This is a challenging and higher-class mode. User can walk on the Walkingpad completely out of remote controller. We only recommend those who have good sports skills or walking-device experience to take the challenge.

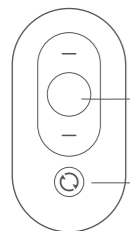

Short press: stop the WalkingPad.

Mode Switch
Short press: switch to manual mode.
Long press: switch to standby mode.

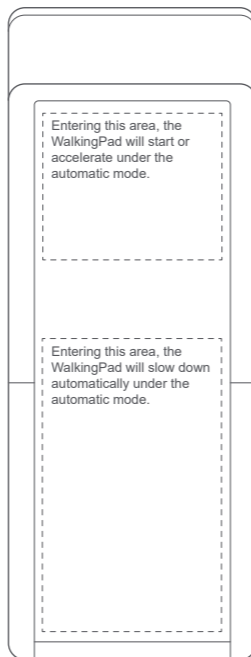

5. Remote Controller Notice

If the remote controller has no response or you change a new one, the remote controller and walking device need to re-establish communication.

Remote control pairing method:


Restart the WalkingPad, press and hold down the mode switch button on the remote control immediately, hearing the sound of "Beep" indicates the success of pairing. Note: During the operation, the remote control should be close to the LED display panel of WalkingPad.

6. Error Warning Light


Error Warning Light on the display panel is off when Walkingpad works well. When error occurs, Error warning light turns on and shows its error code.

- E01: Drive communication fault;
- E02: Motor abnormalities;
- E05: Overcurrent protection;
- E06: Motor Protection;
- E08: Sensor Fault;
- E10: High temperature protection, automatic recovery after the end of countdown;
- E11: Overload protection, please add lubricating oil, and resume automatically after countdown.

05 Safety Notice

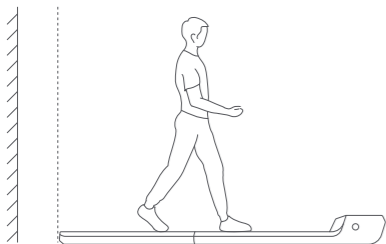


⚠ Please keep a rear distance of 1000 mm or more.

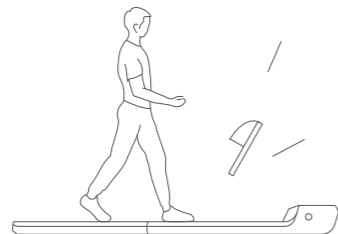


⚠ Please choose sport shoes.




⚠ Please do not stand up on the walking machine when it is under auto calibration situation.

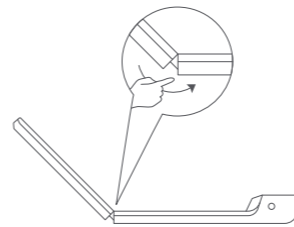


⚠ Anti-pinch.

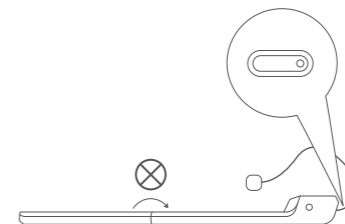


⊗ Turn the power off before fold up the WalkingPad.

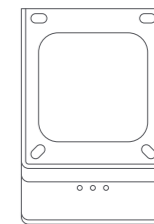

⊗ Prohibition of vertical placement.

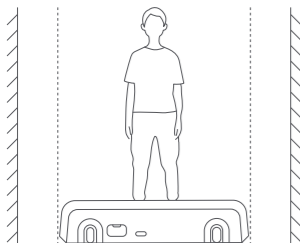


⚠ Please keep a distance of 500 mm or more for both sides.

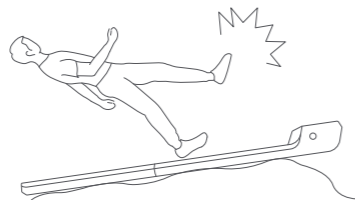


⊗ Using on uneven ground is prohibited.




⊗ It is strictly prohibited to walk up and down the walking machine when running.

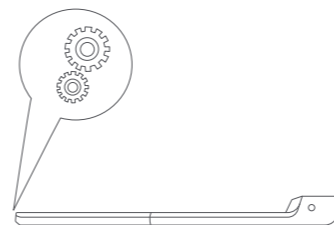

⚠ Anti-involved, please do not trample.

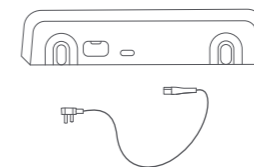



⚠ Please pull out the plug when you are not using it.

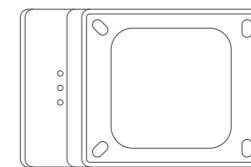



⊗ Prohibition of lateral placement.


05 Safety Notice

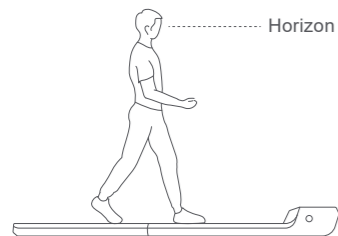


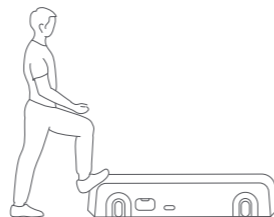
 Please keep your sight horizontal to avoid dizziness.

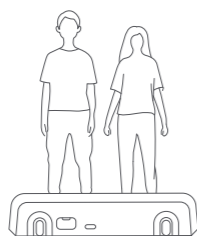


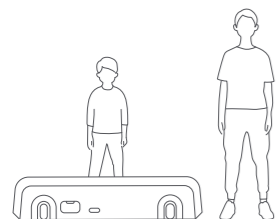
 More than one person on the Walkingpad is prohibited.

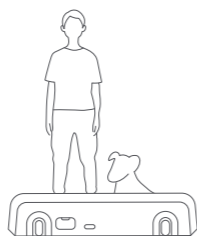


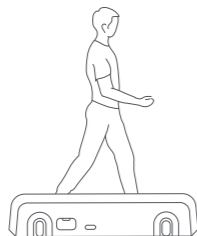
 Using machine with pet is prohibited.




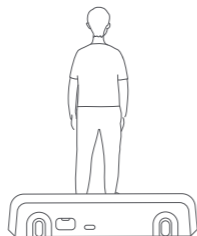
 Trampling the machine head is prohibited.




 Children should be supervised to ensure that they do not play with the Walkingpad.




 Walking sideways on the machine is prohibited.



 Walking backwards on the machine is prohibited.



 Please do not use the walking machine if you are aged people or pregnant women.


06 Maintenance and Service

1. Clean the walking machine




- Turn off the machine and unplug the power cord.
- Add several drops of detergent on cotton rag or towel. Don't pour the detergent on the belt directly, and don't use acid or corrosive cleaners.
- Wipe off dust and stains on the frame, front panel and belt. Do not wipe backside of the belt.
- After using for a period, dust and stains may appear on the back part, that is normal situation, and just clean them up.

2. Adjust the belt

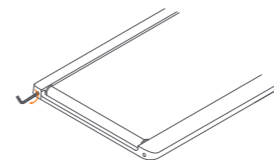

- Press and hold both Mode Switch Button and Acceleration Button on the remote control over 3 seconds.
- Front panel shows "CALI" and the speed is 4 km/hr (2.5 mi/hr).
- If belt deviates to the left: Turn the left adjusting screw for a half-circle clockwise.
- If belt deviates to the right: Turn the right adjusting screw for a half-circle clockwise.
- If belt is slipping: Turn both left and right adjusting screw for a half-circle clockwise at same time.
- Keep the machine running for 1-2 minutes and check whether it needs to readjust.

3. Lubricate the Belt

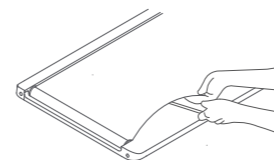

- Turn off the machine and unplug the power cord.
- Lift up the belt and apply silicone oil on the backside of the belt.
- Turn on the machine again
- Keep the machine running under 4 km/hr (2.5 mi/hr) for 10-20 20 seconds.
- Only apply 5 ml ~ 10 ml lubricant oil each time, too much lubricant oil makes the belt become slipping.
- Apply for silicone oil once every 3 months.

07 Implied Warranty

The importer of this machine assures that this device is manufactured with high quality materials.

The prerequisite for the implied warranty is the proper setup in accordance with the operating instructions. Improper use and /or incorrect transportation can void the warranty.

The implied warranty is valid for 1 year, beginning from the date of purchase. For eventual defects please contact the dealer of this product within the guarantee period.

The warranty applies to the following parts (as far as included in the scope of delivery): Frame, cable, electronic devices and wheels.

The guarantee does not cover:

- Damage effected by outer force
- Intervention by unauthorized parties
- Incorrect handling of the product
- Non-compliance of the operating instructions

Wear parts and expendable parts are also not covered.

The device is only intended for home and office use. The warranty does not apply to commercial use of any kind.

Manufactured for:
Gymstick International Oy
Ratavartijankatu 11
15170 Lahti, FINLAND

08 Replacement and Disposal



The battery contained in this appliance must be removed for or disposal.

When replacing the battery, use only original battery, available from our online parts shop.

The battery compartment is located on the underside of the appliance. Open the compartment by removing the screw in the cover using a suitable screwdriver, and then press the lower end of the locking catch on the connectors. In that way, both sides of the connection can be separated by pulling them apart.

When inserting a new battery, push together the two connectors and ensure that the catch locks over the stop.

Never dispose of old battery in domestic garbage, but only through the proper public collection points. This also applies to the battery of defective appliances.

08 Replacement and Disposal



Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.